

# Operating Instructions for Evaluation Electronics

**Model: ZED-K  
and DF-...KLxxx**



## 1. Contents

---

1. Contents.....	2
2. Note .....	3
3. Instrument Inspection.....	3
4. Regulation Use.....	3
5. Operating Principle.....	4
6. Electrical Connection .....	5
6.1 ZED-K field housing and control panel installation.....	5
6.2 DF-...KLxxx, cable connection.....	5
6.3 Connection example .....	6
7. Operation and Menu Structure .....	7
7.1 General.....	7
7.2 Function of the control keys .....	7
7.3 Character explanation for main menu.....	9
7.4 General settings.....	9
7.5 Flow, analogue output and relay S1 .....	11
7.6 Relay S2 .....	13
7.7 User alignment and service-settings.....	14
7.8 Error report .....	16
8. Relay Functions .....	17
8.1 Switching characteristic limit value .....	17
8.2 Switching characteristic window .....	17
9. Technical Information.....	18
10. Order Codes .....	19
11. Dimensions .....	19
12. Declaration of Conformance .....	20

### Manufactured and sold by:

Kobold Messring GmbH  
Nordring 22-24  
D-65719 Hofheim  
Tel.: +49(0)6192-2990  
Fax: +49(0)6192-23398  
E-Mail: [info.de@kobold.com](mailto:info.de@kobold.com)  
Internet: [www.kobold.com](http://www.kobold.com)

## 2. Note

---

Please read these operating instructions before unpacking and putting the unit into operation. Follow the instructions precisely as described herein.

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and in accordance with local regulations applying to Health & Safety and prevention of accidents.

When used in machines, the measuring unit should be used only when the machines fulfil the EC-machine guidelines.

## 3. Instrument Inspection

---

Instruments are inspected before shipping and sent out in perfect condition. Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service / forwarding agent immediately, since they are responsible for damages during transit.

### **Scope of delivery:**

The standard delivery includes:

- Electronics for measuring and monitoring      model: ZED-K and DF-...KLxxx
- Operating Instructions

## 4. Regulation Use

---

Any use of the Evaluation Electronics, model: ZED-K and DF-..KLxxx, which exceeds the manufacturer's specification, may invalidate its warranty. Therefore, any resulting damage is not the responsibility of the manufacturer. The user assumes all risk for such usage.

## 5. Operating Principle

---

The evaluation unit changes the frequency signal of the pickup into a flow reading and into a scalable analogue signal.

The top display line of the double-spaced display shows the flow value with measuring unit and the bottom line a bargraph indicator proportional to the measuring value.

The two relays with floating output changeover contacts continuously monitor the flow values. Switching point, hysteresis, a window point, and switch on or off delay can be set separately for each relay. The switching points can also be set directly by using the control keys without having to change over into the menu. A red LED indicates the switching status.


The analogue output is optionally available as current output with 0(4)...20 mA or as voltage output with 0...10 V. The menu languages can be switched between German or English. If used where the flow readings change rapidly, the display can be pacified and the analogue reading averaged by switching on some software.

A MIN/MAX reading memory determines the extreme readings of the flow. The display of the readings and the resetting are achieved by using the keys without having to change into the menu. Resetting by using the keys can also be blocked.

The set parameters can be protected against unauthorized alteration by using a password function.

## 6. Electrical Connection

### 6.1 ZED-K field housing and control panel installation

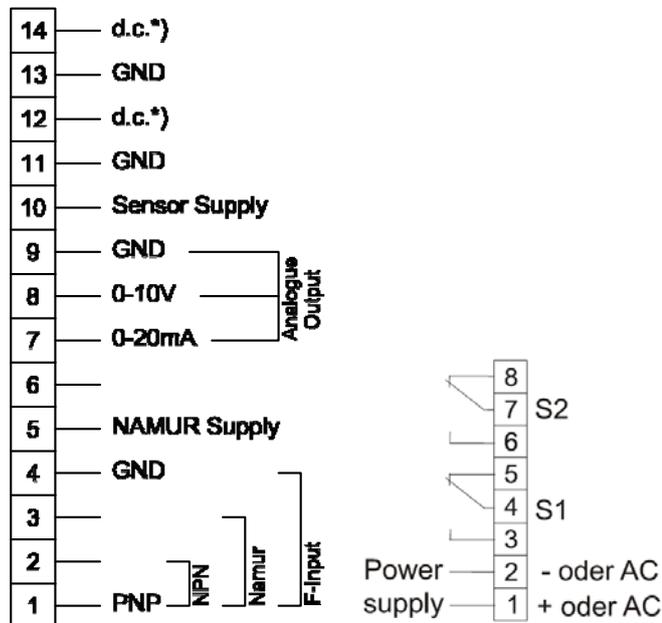

\*) Don't connect the clamp!


### 6.2 DF-...KLxxx, cable connection

Wire number	ZED-K electronics
1	+24 V <sub>DC</sub>
2	GND
3	4-20 mA / 0-10 V
4	GND
5	S1 N/O
6	S1 COM
7	S1 N/C
8	S2 N/O
9	S2 COM
10	S2 N/C


\*) Don't connect the wire!

## 6.3 Connection example


### PNP-Sensor

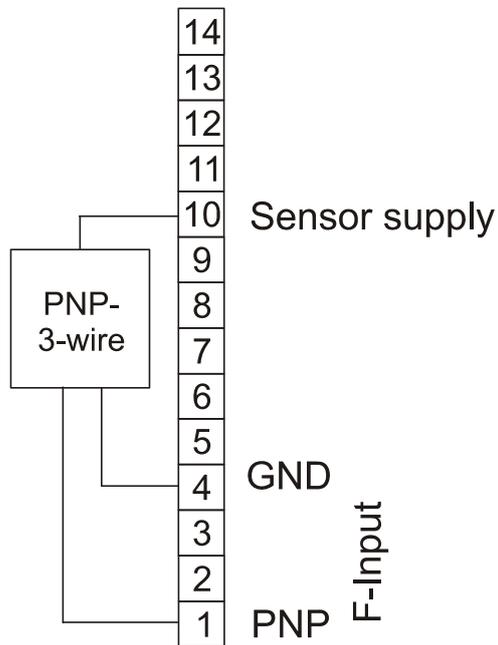

### NPN-Sensor

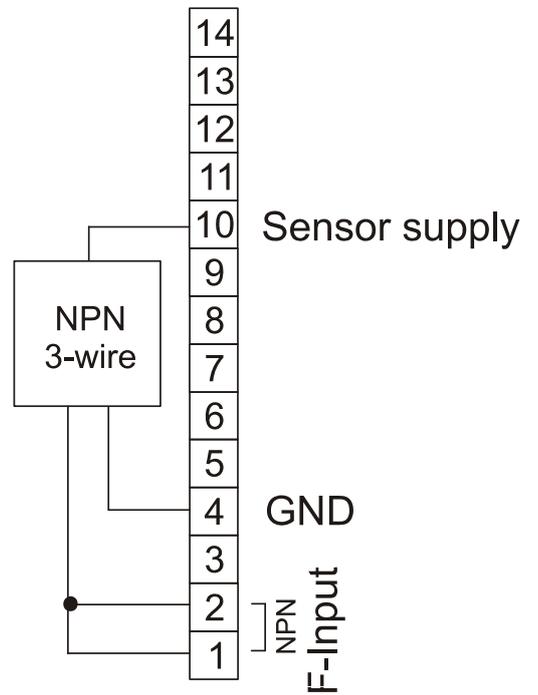

### Namur-Sensor

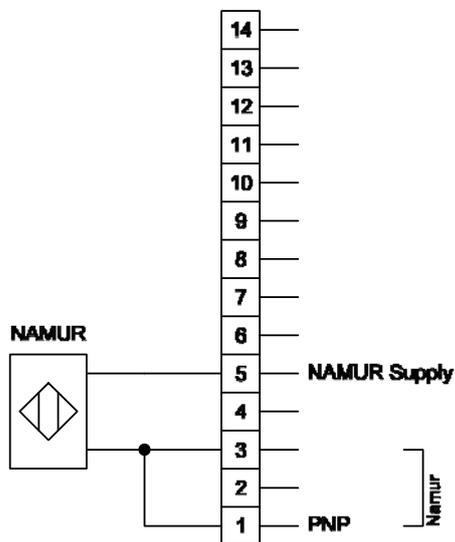

## 7. Operation and Menu Structure

### 7.1 General

Only the menu items of which the lines are marked in the selection matrix (in the right position) in grey colour, are available in the respective instrument version.

*Italic* written values in the menu structure are blinking in the display, if they have been chosen for any input.



The parameter can only be changed, if the security code has been entered correctly! The message „locked“ will appear if the input has not been activated.

### 7.2 Function of the control keys

Operating mode >Measure< :




- Press briefly: → a) Display total quantity, then  
Display corresponding scale unit or  
→ b) Reset status reports.
- Press for 3 sec: → Switch to operating mode >**Parameterise**<.



- Press briefly: → Display min. flow value (MIN value memory).
- Press for 3 sec: → Enter switching point for Relay S1 **s1SPPoint**  
(only if parameter **SPdirect** is set to “yes”).



- Press briefly: → Display max. flow value (MAX value memory).
- Press for 3 sec: → Enter switching point for Relay S2 **s2SPPoint**  
(only when parameter **SPdirect** is switched to “yes”).

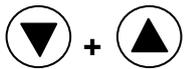

Press for 3 sec: → Sets min. and max. value memory to flow value  
(only when parameter **fMMReDir** is switched to “yes”).

## Operating mode >Parameterize<:



- Press briefly: → a) Open parameter group or  
→ b) Change parameter (go lower in menu level) or  
→ c) Adopt value input.
- Press for 3 sec: → Abort input and go back one menu level.



- Press briefly: → a) Select parameter group or parameter or  
→ b) Reduce selected number by 1 or  
→ c) Select list value (e.g.... L/m, L/h, m<sup>3</sup>/m, ...).



- Press briefly: → a) Select parameter group or parameter or  
→ b) Increase selected number by 1 or  
→ c) Select list value (e.g.... m<sup>3</sup>/m, L/h, L/m, ...).



---

**Note:** If no button is pressed for 20 seconds during parameterising, the instrument automatically switches back into >measuring< mode.

---

## 7.3 Character explanation for main menu

( e ) - Button  press shortly.

( E ) - Button  press and hold for approx. 3 seconds.

( ▼ ) - Button  press shortly.

( ▲ ) - Button  press shortly.


## 7.4 General settings

	Level 1 Choose parameter-groups	Level 2 Display parameter, choose functions	Level 3 Enter/change values, carry out functions	DF...K.Lxxx ZED-K Configuration level ZED-Devices Activation with PWV = 6571
Operating Mode > MEASURING <	( E ) → GENERAL ← ( E ) ADJUSTM. ( ▼ ) ↓	( e ) → Language ← ( E ) german ( ▼ ) ↓ ( ▲ ) ↑	( e ) → Language ← ( E ) english ( ▲ ) → german ← ( ▼ )	
	← ( E ) fUnitFS m3/h ( ▼ ) ↓ ( ▲ ) ↑	( e ) → FUnitFS ← ( E ) mL/m... ( ▲ ) → fUnitFS ← ( ▼ ) ... GPH		
	← ( E ) fValueFS 2700m3/h ( ▼ ) ↓ ( ▲ ) ↑	( e ) → VALUE INPUT ← ( E )		
	← ( E ) fMinVal 100.0 L/m ( ▼ ) ↓ ( ▲ ) ↑	( e ) → VALUE INPUT ← ( E )		
	← ( E ) fPls/rev 3 ( ▼ ) ↓ ( ▲ ) ↑	( e ) → fPls/rev ← ( E ) 0... ( ▲ ) → fPls/rev ← ( ▼ ) ... 10		
	← ( E ) fJumpVD 5 % ( ▼ ) ↓ ( ▲ ) ↑	( e ) → fJumpVD ← ( E ) 1 % ... ( ▲ ) → fJumpVD ← ( ▼ ) ... 20 %		
	← ( E ) fOverfV 100 % ( ▼ ) ↓ ( ▲ ) ↑	( e ) → fOverfV ← ( E ) 100 % ... ( ▲ ) → fOverfV ← ( ▼ ) ... 200 %		
	← ( E ) fFactor factory ( ▼ ) ↓ ( ▲ ) ↑	( e ) → fFactor ← ( E ) customer ( ▲ ) → fFactor ← ( ▼ ) factory		
	← ( E ) UserUnit 115,6271 ( ▼ ) ↓ ( ▲ ) ↑	( e ) → VALUE INPUT ← ( E )		
	← ( E ) SPdirect yes ( ▼ ) ↓ ( ▲ ) ↑	( e ) → SP direct ← ( E ) no ( ▲ ) → SP direct ← ( ▼ ) yes		

GENERAL SETTINGS		
Menu Item	Parameter / Function	Explanation / Values / Other
Language	Select menu language	German or English
fUnitFS *	Measuring unit for flow measurement	mL/s, mL/m, L/s, L/m, L/h, m <sup>3</sup> /m, m <sup>3</sup> /h, GPM, GPH, UU/s, UU/m, UU/h
fValueFS *	Maximum measuring range value for flow measurement	Range = 0,00...99,9..._100...9999
fMinVal *	Minimum measuring range value for flow measurement	Basis is fValueFS and fUnitFS If the level drops below this, the flow indicator goes to 0.
fPIs/rev*	Impulse per sensor wheel revolution	Number of impulses per revolution of the sensor wheel or the like Necessary for long-term period averaging if the readings per revolution vary. The function is switched off when the input value is 1.
fJumpVD*	Flow switch value for attenuation cut-off	Value in %, basis is fValueFS and fUnitFS. Attenuation does not function if the switch value is 0%.
fOverflV *	Flow overflow value (overflow)	Value in %, basis is fValueFS and fUnitFS. If exceeded, an M100 report is generated and faded in, alternating with the flow indicator. The report is saved and can be reset by briefly pressing the PGM key.
fFactor	Select pulse ration	Selection of works calibration or user calibration. (only for devices Model DF-...ZLxxx and Model-...ExxR)
UserUnit.	Special volume unit	Customer-specific special unit UU. The value entered corresponds to the number of litres of the special unit, e.g. in the case of the unit <i>Barrel</i> the factor would for example be 115.6271.
SPdirect	Activation of direct input switching point	yes: Direct input of switching points s1SPoint and s2SPoint is possible using the keys (default). no: The switching points can only be set in the menu .

\*) Only for ZED devices: Device-specific parameter, is only visible after activation in the **SecCode** menu item in the **SERVICE** menu group, and can be changed.

## 7.5 Flow, analogue output and relay S1

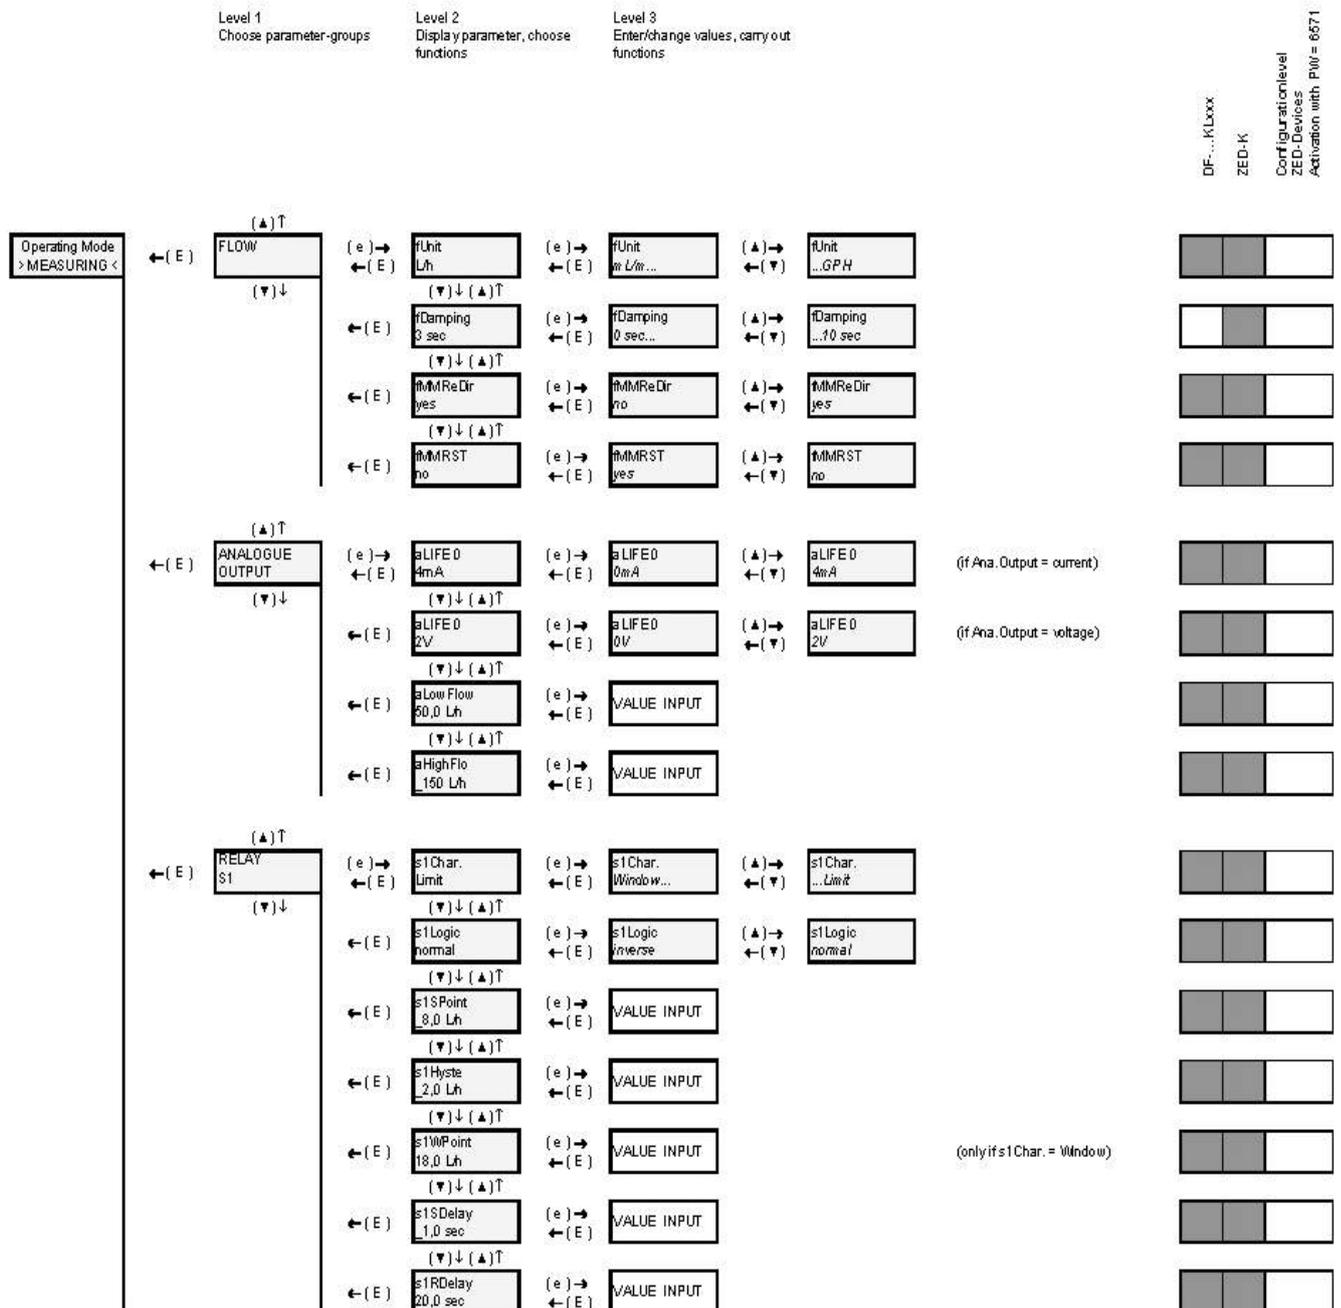

## FLOW

Menu Item	Parameter / Function	Explanation / Values / Other
fUnit	Unit of flow indicator	mL/s, mL/m, L/s, L/m, L/h, m <sup>3</sup> /m, m <sup>3</sup> /h, GPM, GPH, UU/s, UU/m, UU/h
fDamping	Attenuation of reading fluctuations in the flow indicator	The attenuation pacifies the flow indicator. The attenuation value is the approximate equivalent of the setting time of the display value to c. 90% of a measured value jump in seconds. (Parameter is blocked at DF-...ZLxxx devices).
fMMReDir	Reset the Min/Max flow value directly using the keys, without using the menu	yes: direct resetting of the Min/Max value memory by simultaneously pressing (3 sec) the (+) and (-) keys (default). no: memory reset only possible with fMMRST.
fMMRST	Reset the Min/Max flow value memory of the flow indicator	yes: Resets Min / Max value memory for the flow indicator no: No action.


## ANALOGUE OUTPUT

Menu Item	Parameter / Function	Explanation / Values / Other
aLIFE 0	Select Life Zero	Offset at power output: 0 mA or 4 mA at 0-10 V $\pm$ 0 mA $\rightarrow$ 0 V and 4 mA $\rightarrow$ 2 V
aLowFlow	Flow reading at 0/4 mA or 0/2 V	Lower flow reading of gauged output range, value has the same unit as the flow indicator
aHighFlo	Flow reading at 20 mA or 10 V	Upper flow reading of gauged output range, value has the same unit as the flow indicator

## RELAY S1


Menu Item	Parameter / Function	Explanation / Values / Other
s1Char.	Relay1 Switch characteristic	Limit: Monitoring a reading (s1SPoint). Window: Monitoring an adjustable measuring range (s1SPoint...s1Fpunkt).
s1Logic	Relay1 Switch logic	normal: Relay 1 activated when the limit value is exceeded. invers: Relay 1 drops out when the limit value is exceeded.
s1SPoint	Relay1 Switchpoint	Reading is in the same units as the flow indicator.
s1Hyste	Relay1 Hysteresis	Reading is in the same units as the flow indicator.
s1FPoint	Relay1 Windowpoint	Reading is in the same units as the flow indicator. (only if <b>s1Char.</b> is set to <b>Window</b> )
s1SDelay	Relay1 Switch delay	Delays the switching of the relay when the limit value is exceeded. Range: _ 0,0...99,9 sec
s1RDelay	Relay1 Reset delay	Delays the switching of the relay when the limit value is undershot. Range: _ 0,0...99,9 sec

## 7.6 Relay S2

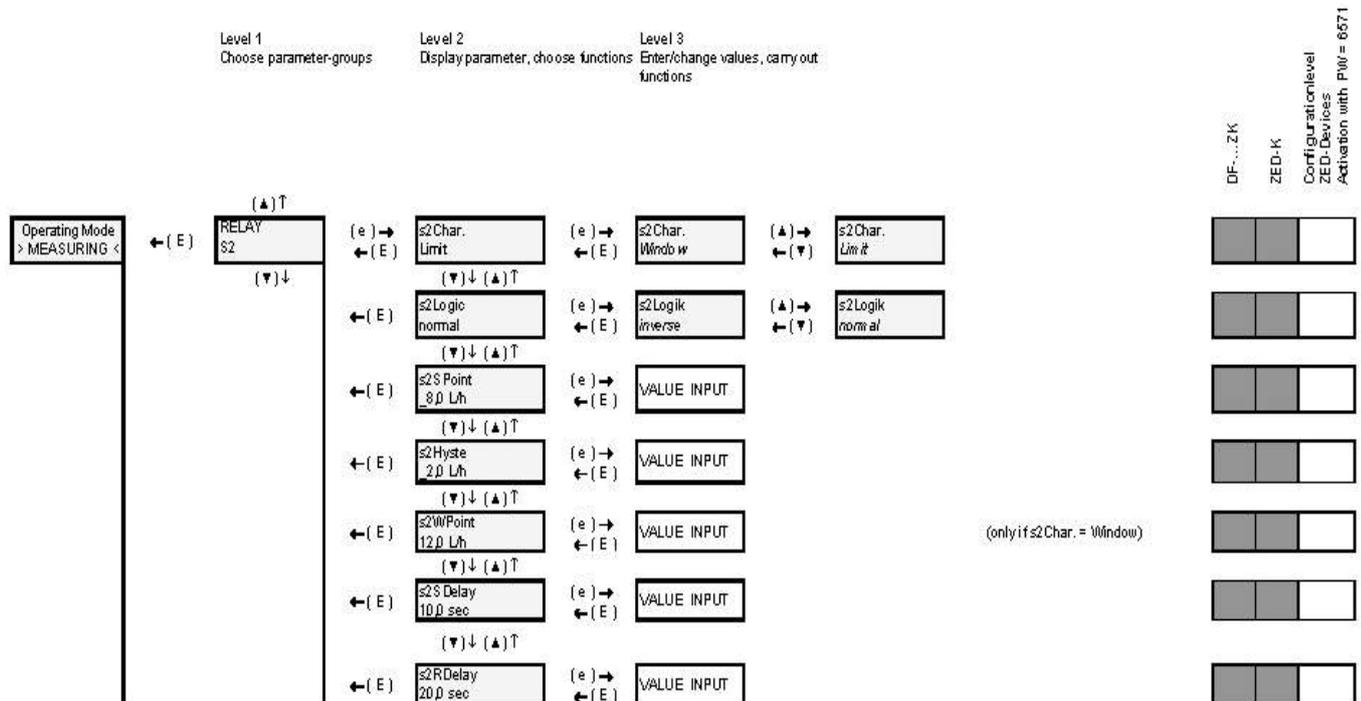

RELAY S2		
Menu Item	Parameter / Function	Explanation / Values / Other
s2Char.	Relay2 Switch characteristic	Limit: Monitoring a reading (s2SPoint). Window: Monitoring an adjustable measuring range (s2SPoint...s12punkt).
s2Logic	Relay2 Switch logic	normal: Relay 2 activated when the limit value is exceeded. invers: Relay 2 drops out when the limit value is exceeded.
s2SPoint	Relay2 Switchpoint	Reading is in the same units as the flow indicator.
s2Hyste	Relay2 Hysteresis	Reading is in the same units as the flow indicator.
s2FPoint	Relay2 Window point	Reading is in the same units as the flow indicator. (only if <b>s2Char.</b> is set to <b>Window</b> )
s2SDelay	Relay2 Switch delay	Delays the switching of the relay when the limit value is exceeded. Range: _ 0,0...99,9 sec
s2RDelay	Relay2 Reset delay	Delays the switching of the relay when the limit value is undershot. Range: _ 0,0...99,9 sec

## 7.7 User alignment and service-settings

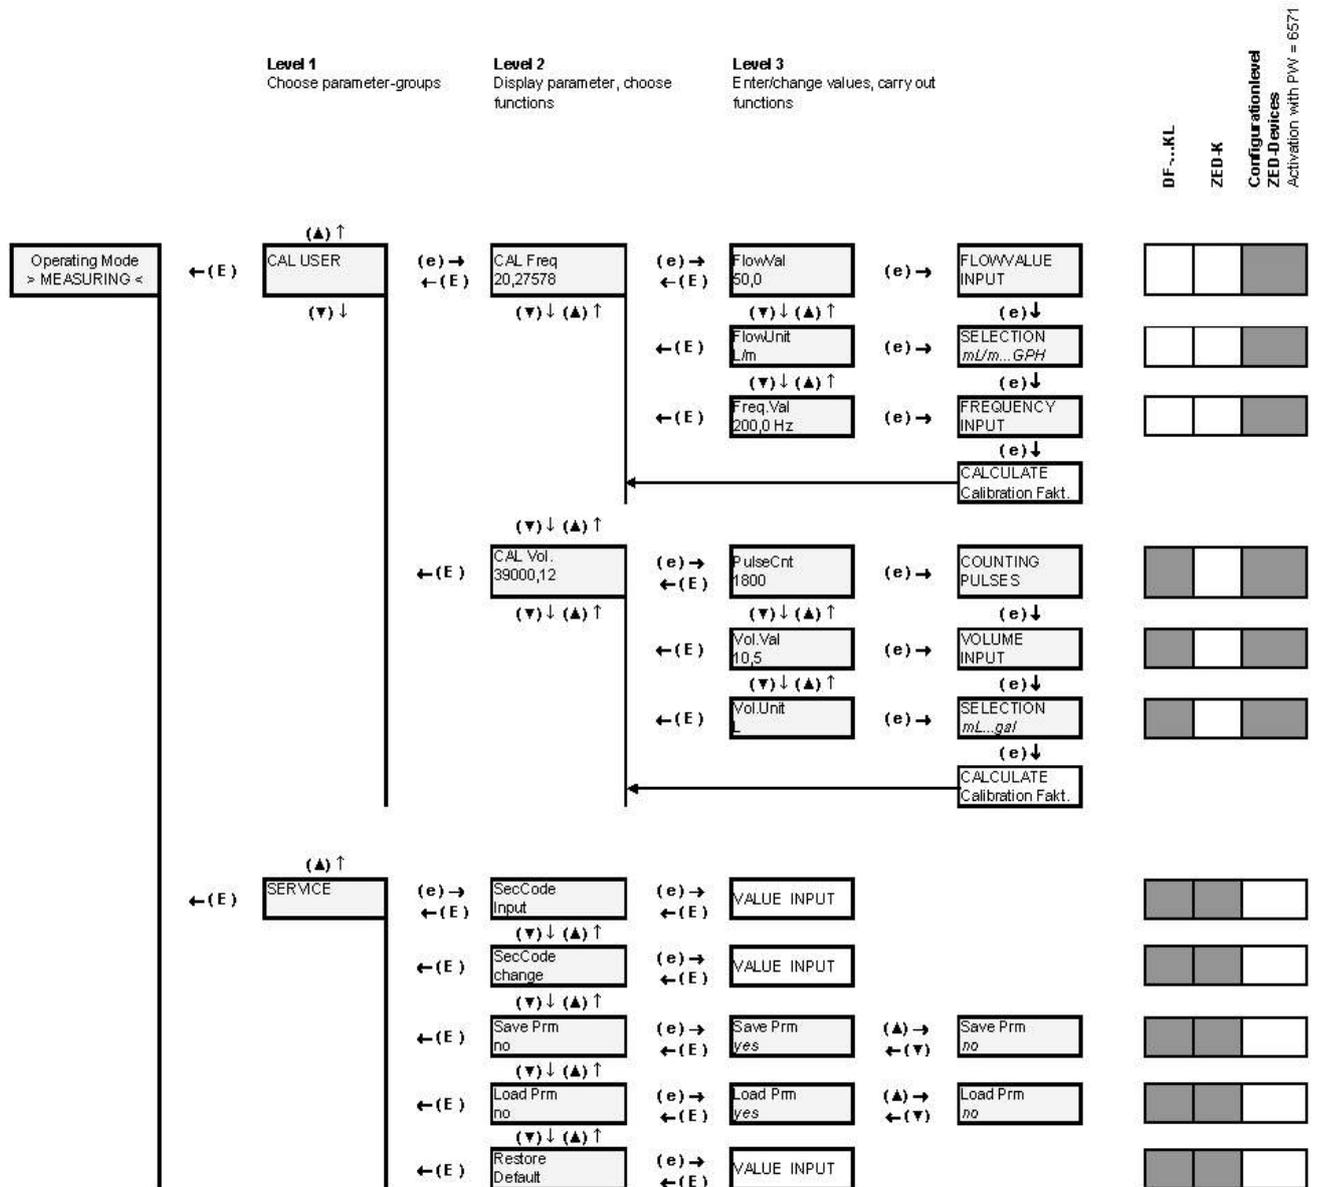

USER CALIBRATION	
Menu Item	Function / Description
<b>CAL Freq*</b>	<p>Calibrate by entering frequency and flow.</p> <p>In the menu item <b>CAL Freq</b> the bottom line always shows the current pulse value of the User calibration.</p> <p>Calibration process:</p> <ul style="list-style-type: none"> <li>a) <b>FlowVal</b> Enter nominal flow value of the sensor. &gt; (e) press &gt;</li> <li>b) <b>FlowUnit</b> Enter unit for flow value. &gt; (e) press &gt;</li> <li>c) <b>Freq.Val.</b> Enter nominal frequency &gt; finish with (e).</li> </ul> <p>The new pulse value of the User calibration is calculated from these three values and saved as user calibration for the flow measurement, e.g. 20.2757 pls./litre.</p>
<b>CAL Vol.</b>	<p>Calibration process using impulse counting and volume input (cc procedure).</p> <p>In the menu item <b>CAL Vol.</b> the bottom line always shows the current pulse value of the User calibration.</p> <p>Calibration process:</p> <ul style="list-style-type: none"> <li>a) <b>PulseCnt</b> measures number of impulses (e) press &gt; start counter (impulses are counted) &gt; (e) press &gt; stops counter.</li> <li>b) <b>Vol.Val</b> Enter measured volume value &gt; (e) press.</li> <li>c) <b>Vol.Unit</b> Enter unit for volume value &gt; finish with (e).</li> </ul> <p>The pulse value of the User calibration is calculated from these three values and is saved as the user calibration for the flow measurement, e.g. 3900,5 pls./L.</p>

\*) CAL Freq – Only possible with ZED devices.



**Note:** With ZED devices it is necessary to enable the device-specific parameter input in the menu item **SecCode** in the menu **SERVICE** in order to activate the **CAL-USER** function.



**Note:** If the new pulse ratio will be used for measurement, than the menu item **fFaktor** in the menu group **General Settings** must be setted to **USER** calibration.


SERVICE		
Menu Item	Function	Explanation / Values / Other
<b>SecCode Input</b>	Enter security code	Input of 4-digit security code and enablement of the parameter change.  The following codes have been defined:  3461 – General menu release 6571 – Activates the device-specific parameters (only ZED and measuring unit as compact version)
<b>SecCode change</b>	Change security code	Define or change security code for the first time or change. If no code ( = 0000) has been set, then the parameter values set are unsecured!
<b>Save Prm</b>	Save parameter record	Save current settings
<b>Load Prm</b>	Load parameter record	Restore saved settings (reload).
<b>Restore Default</b>	Reset to works default settings	Load initial setting with password 2541.  ATTENTION: For ZED-devices the device-specific parameters will be overwritten. An adjustment provided by the customer will be lost in the process.

## 7.8 Error report


Error code	Reason	Reset
<b>E102</b>	User unit may not be $\leq 0$	Correct parameter
<b>E142</b>	Distance between upper and lower analogue value too small (based on the actual flow)	Correct parameter
<b>E 161</b>	Value is greater than maximum measuring range value.	Correct parameter
<b>E162</b>	Hysteresis too large	Correct parameter
<b>E 163</b>	Window point is lower than switching point.	Correct parameter
<b>E242</b>	Frequency must be between 0,2 and 2000 Hz	Correct parameter
<b>E245</b>	Calculated pulse value out of valid range	Correct parameter
<b>E300</b>	Error memory value of totalising/part counter	Keep  +  pressed about 20 seconds
<b>M100</b>	Overflow	Acknowledge with PGM button
<b>####</b>	Value does not fit in the display	Choose suitable measuring unit

## 8. Relay Functions

### 8.1 Switching characteristic limit value

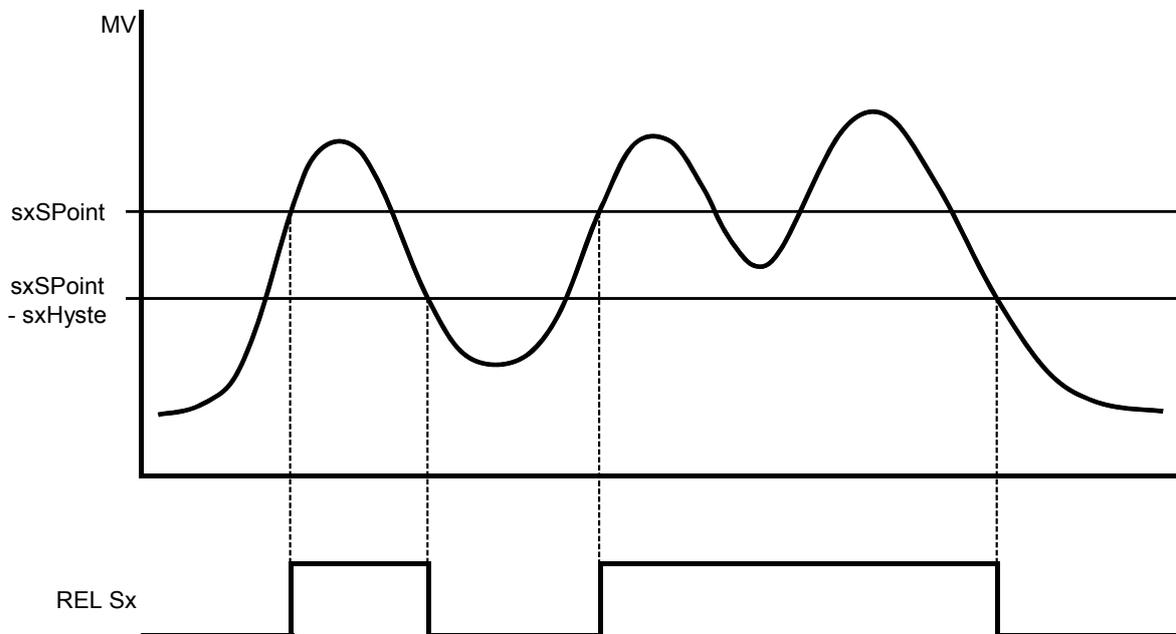

### 8.2 Switching characteristic window

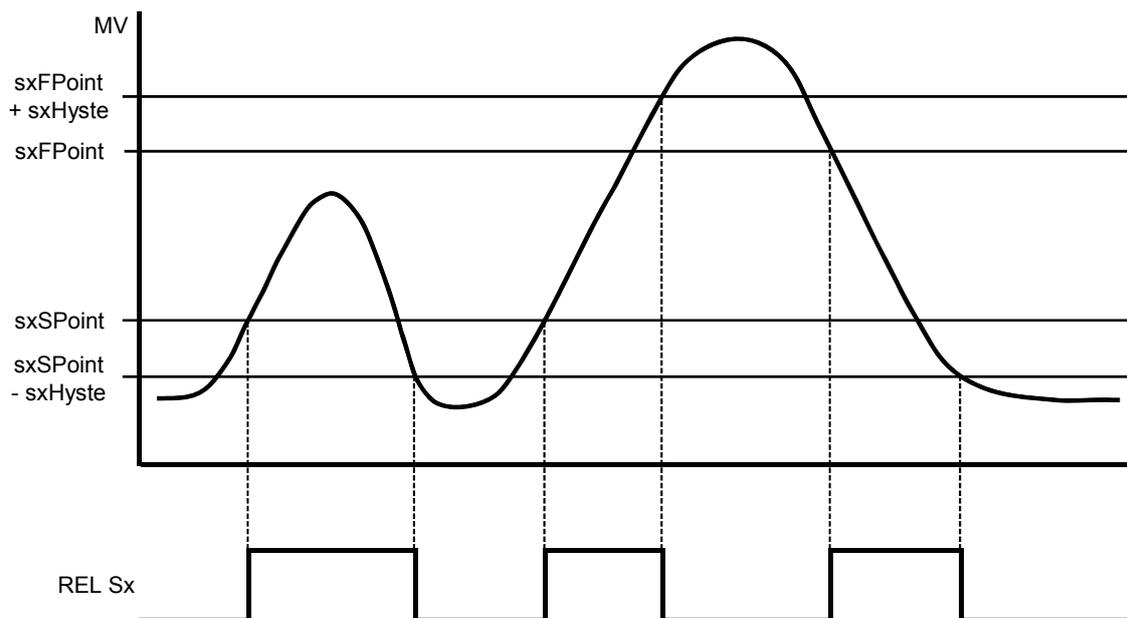

## 9. Technical Information

---

Display:	2 x 8-digit alphanumeric, LCD module, illuminated
Display rate:	1 s <sup>-1</sup>
Flow display:	3- or 4-digit (XX.X, X.XX or XXXX)
Flow units:	mL/s, mL/m, L/s, L/m, L/h, m <sup>3</sup> /m, m <sup>3</sup> /h, GPM (US), GPH (US), user unit per h/min/s selectable
Measurement input:	0.2...2000 Hz (5...24 V <sub>DC</sub> ), TTL, PNP, NPN, Namur
Parameter input:	menu controlled, German or English
Parameter protection:	4-digit password
Control elements:	3 keys
Customer comparison:	by entering frequency and measured value or in the Teach-In procedure (level calibration)
Control input:	reset-function
Relay outputs:	2 x changer (2 x N/O contact DF-...KL) max. 250 V <sub>AC/DC</sub> 5 A / 1000 VA
Voltage supply:	24 V <sub>DC</sub> ± 20 %, approx. 80 mA or 90...250 V <sub>AC</sub> / max. 3 VA
Analogue output:	0(4)-20 mA Load: max. 500 Ω (300 Ω at AC-supply) or 0-10 V (Load: > 100kΩ)
Sensor supply:	23 V (at 24 V <sub>DC</sub> ) / max. 50 mA 24 V (AC-supply) / max. 50 mA
NAMUR supply:	8.2 V <sub>DC</sub>
Ambient temp.:	-20...+70 °C
Dimensions:	96 x 96 x 109 mm (LxWxD) incl. screw clamp (control panel installation) 117 x 117 x 127 mm (LxWxD) (field casing)
Aperture size:	92 <sup>+0.8</sup> x 92 <sup>+0.8</sup> mm (control panel installation)
Casing material:	fibreglass reinforced Noryl, (control panel installation) powder coated aluminium/PA 66 (field casing)
Protection type:	IP 40 on front clamp IP 00 (control panel installation) IP 65 (field casing)
Mounting:	with mounting clip Form B (DIN 43 835) (control panel installation) wall and pipe mounting (field casing)
Connection:	plug-in terminal strip (control panel installation) cable connection (field casing)
Weight:	approx. 360 g (control panel installation) approx. 1240 g (field casing)

## 10. Order Codes


(Order example: ZED-ZF10 KS 4R P)

Supply	Model	Electrical connection	Analogue output	Casing
90-250 V <sub>AC</sub>	ZED-KF10	<b>KS</b> = terminal strip (control panel installation)  <b>MS</b> = cable connection M 18 (field casing)	<b>4R</b> = 0(A)-20 mA  <b>1 R</b> = 0-10 V	<b>P</b> = control panel installation 96x96 mm  <b>F</b> = field casing 116 x116 mm  <b>S</b> = field casing with wall mounting, infinitely variable pivotable  <b>R</b> = field casing with 2"-pipe mounting
24 V <sub>DC</sub>	ZED-KF13			


The order details of a ZED electronics in combination with a flow sensor can be found in the data sheet of the measuring device.

## 11. Dimensions

ZED-K control panel installation (casing P)

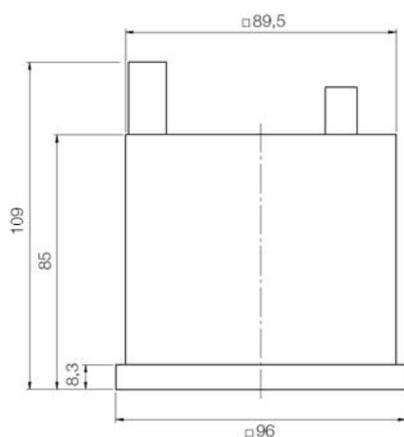

ZED-K field housing

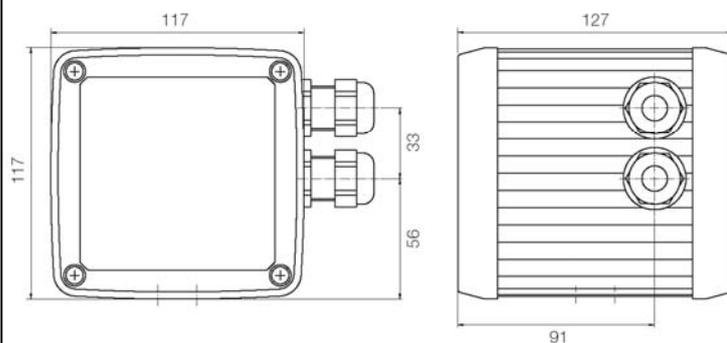

## 12. Declaration of Conformance

---

We, KOBOLD Messring GmbH, Hofheim-Ts, Germany, declare under our sole responsibility that the product:

**Evaluation Electronics      Model: ZED-K and model: DF-...KLxxx**

to which this declaration relates is in conformity with the standards noted below:

**EN 61326-1:2013**

Electrical equipment for control and instrumentation technology and laboratory use – EMC-requirements (industrial area)

**EN 61010-1:2011**

Safety requirements for electrical measuring-, control- and laboratory instruments.

**EN 60529:2014**

Protection type housing (IP-Code)

Also the following EC guidelines are fulfilled:

**2014/30/EU**

**EMC Directive**

**2014/35/EU**

**Low Voltage Directive**

**2011/65/EU**

**RoHS** (category 9) industrial monitoring and control instruments, compliant, no CE-marking for the transitional period until 2017

Hofheim, 17. May 2016



H. Peters  
General Manager



M. Wenzel  
Proxy Holder